

TO LOAD ROLL

1



2



3



4



5



PRINT-HEAD ADJUSTMENT

6



PRINTING SETTING

7



CHANGING INK ROLLER

8



9



Instructions

- 1 To open the label roll holder, pull upwards using the hole provided.
- 2 To open the base plate, pull down using rounded end of the base plate.
- 3 Open the inner base plate. Insert the label roll into the holder. Slide the labels through the machine with the labels facing upwards.
- 4 Close the label roll holder.
- 5 Pull the labels through the machine, about 10 cms. Close the inner base plate and then the outer base plate, keeping the labels central, as shown.
- 6 To adjust the print on the labels, slacken the head screws and move the print head backwards or forwards. Then re-tighten the screws.
- 7 To locate the indicator on the band, move the dial knob and select the required digit, then push it back into place.
- 8 To open the ink roller holder, pull outwards.
- 9 Replace the ink roller by pressing gently as indicated.